

Model ICC-0081

ELECTRONIC MINI CALCULATOR

DISASSEMBLY INSTRUCTION

DISASSEMBLY OF MACHINE FOR ICC-0081

Order of operation Explanation

A. DISASSEMBLY OF COVER ASSEMBLY

- 1. Remove the 2 rubber feet () and remove the 2 Papers shield (2).
- 2. Remove the 4 screws (3) and open the cabinet (4) (Fig-1).

B. REMOVAL OF PRINTED CIRCUIT BOARD

- 1. Remove the 2 screws (5), then pull the slide switch (6) up from the fixture plate (7).
- 2. Remove the 2 screws (8) and remove the printed circuit board (P.C.B.) (9), paper shield


(1), insulating plate (1), display panel (12), fixture plate of slide switch (7) and ground terminal (13) from base (14).

3. Pull the 44 pin connector (15).


4. Remove the 2 screws (6) and remove power transformer (7) (Fig-2) .


C. DISASSEMBLY OF KEY BOARD

- 1. Remove the 2 screws (18) and then remove the 2 fixture plates (19).
- 2. Remove the 4 screws (2) and lift up the key board (2).
- 3. Remove the 2 screws 2 and remove the seesaw switch 23.
- 4. Remove the 2 screws (2) and remove the rotary switch (25) (Fig-3).

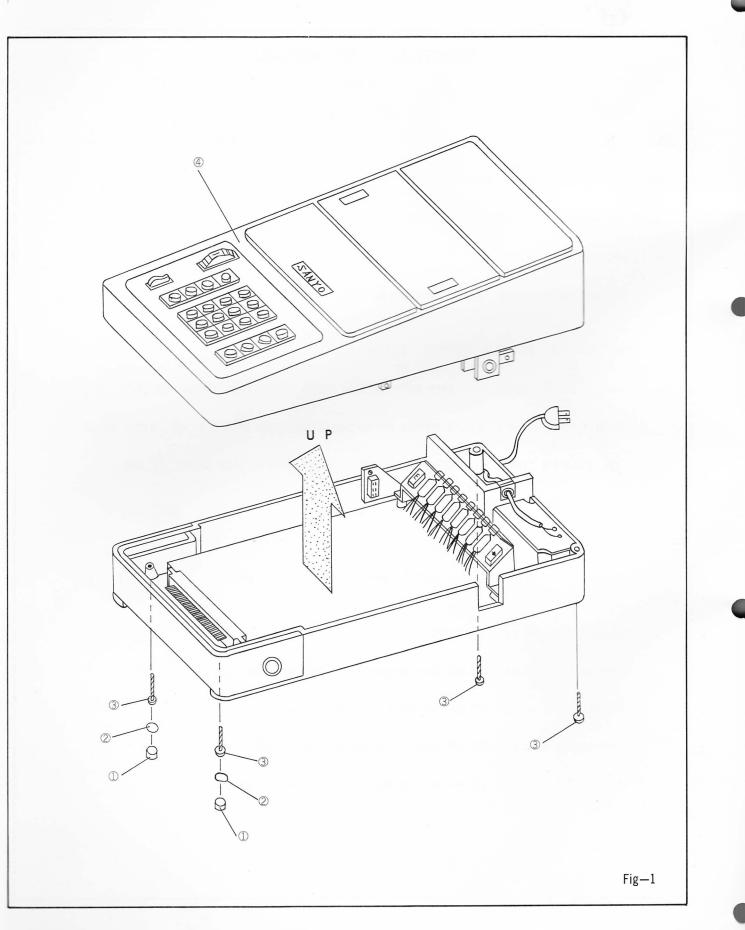

-2-

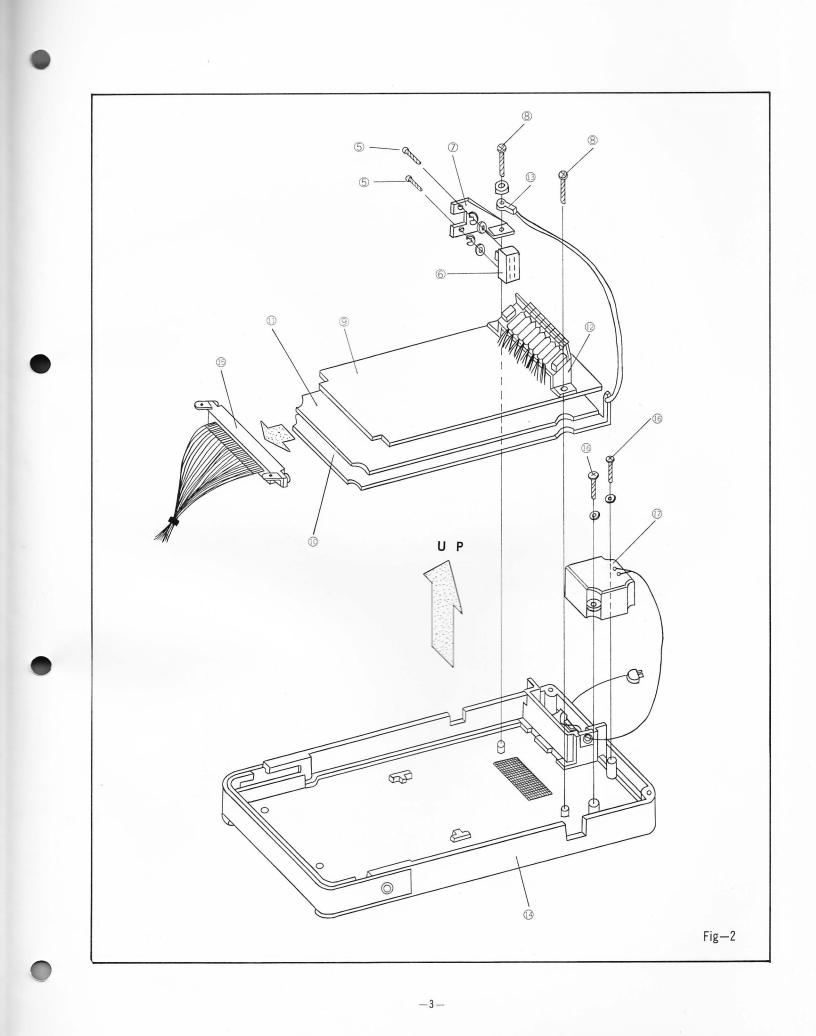

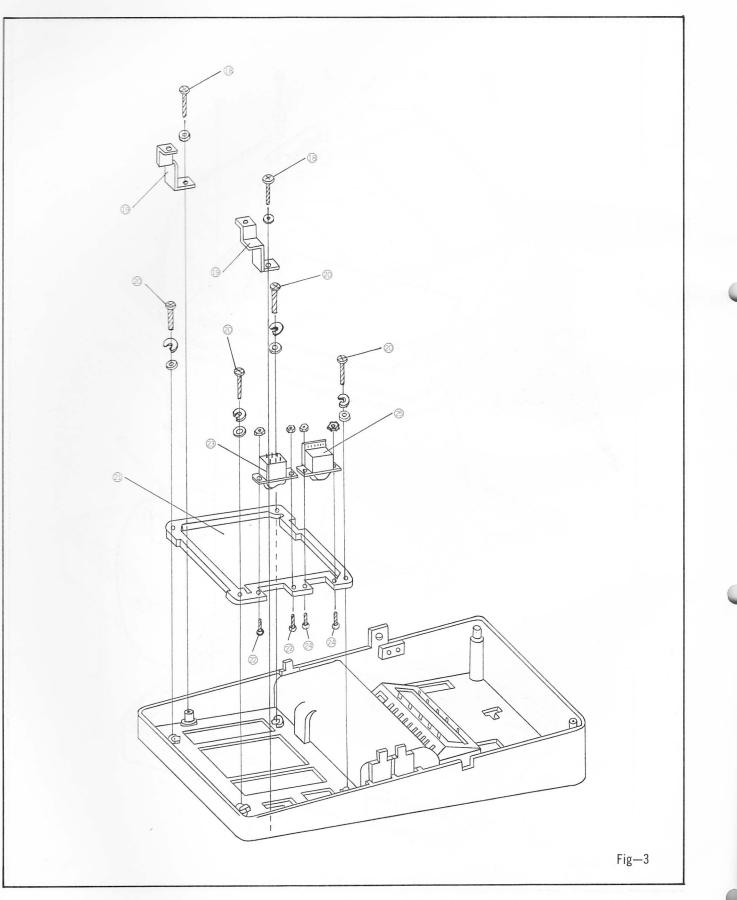

-4-

-

÷.

