ELECTRONIC CALCULATOR

SUPER DOLLAR MACHINE

Fundamental Operation

	Pressing Order	
Examples:	1 2 3 4 5 6 7 8 9 10 11	
1.23 + 3.45 = 4.68	CC123E345+	= 4.68
19.00 - 13.50 = 5.50	CC1900E1350-	= 5.50
1.25 x 12 = 15.00.	CC125E12X	= 15.00
$3.25 \div 6 = 0.54$	CC325 E6:	= 0.54
Repeat add/subtract		
3+3+3+3+3 = 15.00	CC300E+++	= 15.00
7_7_7_7_7 = -21.00	CC700E	= -21.00

Chain Calculations

 $65 \times 5 + 24 - 9 = 340.00$ Pressing order: $6500 E 5 \times 2400 + 900 - = 340.00$

OPERATING INSTRUCTIONS

SUPER DOLLAR MACHINE

This calculator is specially designed for monetary use, either in pound sterling or dollar, as it has fixed 2 place decimal. For example, £1.25 (or \$1.25), just press 125, the display will show 1.25 automatically.

Power switch must be in "off" position before connecting battery or AC adaptor.

Always press twice "C" (Clear) key before beginning a new calculation and press "E" (Enter) after each entry.

 $70 \div 2 \times 3 - 21.50 + 4 = 87.50$ Pressing order: $7000 E 2 \div 3 \times 2150 - 400 + = 87.50$

Correct False Entry

If a false entry is made, press once "C" key then enter correct number.

4.00

= 256.00

Automatic Squaring

Any entered number is squared by pressing the "X" key. e.g.

$$2^{2} = 4$$
 $4^{2} = 16$
 $16^{2} = 256$

Pressing Order

$16^2 = 256$ 256^2 = Overflow

IMPORTANT NOTE:

DISPLAY BRIGHTNESS DOES NOT INDICATE BATTERY CONDITION. IF CALCULATOR BEGINS TO MAKE ERRORS, REPLACE BATTERY. THIS ADVANCED CIRCUIT AS WITH ALL CALCULA-TORS MUST HAVE GOOD BATTERIES FOR PERFECT OPERATION.

Counting by One or Taking

To set it for counting, press 1 E (enter), then each time you press + key, it will add 1. It can also be used backwards by pressing and it will take 1 off each time.

6. Overflow

When the number exceeds the capacity of the display, it overflows and shows one or more Es.

7. Decimal Point

Used for addition and subtraction only.

8. Low Battery

If miscalculations occur, the battery may be too low and need replacing.